



**OPERATOR'S MANUAL
SET-UP INSTRUCTIONS
&
PARTS LIST**

**18' SINGLE AUGER SEED-FILL
FOR CIH 1240/1245 PIVOT PLANTER**



MARKET FARM EQUIPMENT LIMITED, R.R.#1 DASHWOOD, ONTARIO, CANADA

TEL# 519-238-2301 FAX# 519-238-6044 E-MAIL: mfeltd@execulink.com

www.marketfarmequipment.com

"SERVING THE FARM INDUSTRY SINCE 1962"

WARRANTY PROCEDURE

MARKET FARM EQUIPMENT WARRANTS THEIR MANUFACTURED PRODUCTS TO BE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR AFTER THE DATE OF PURCHASE TO THE FIRST END USER AND IS SUBJECT TO THE FOLLOWING CONDITIONS.

1. Damage caused by improper use, negligence, or operation beyond rated capacity, improper set-up, adjustment, or any unauthorized modifications made by the dealer or customer, shall void this warranty.
2. Notification of damage or warranty claims must be submitted to Market Farm Equipment (M.F.E.) within seven (7) days of the date of failure.
3. All defective parts must be made available by the dealer, for inspection by M.F.E. if required, and returned at the dealer's expense.
4. All warranty claims must be approved by M.F.E.
5. The labour and freight required to replace defective parts is not reimbursable.
6. Exchange, credit or warranty status will be based on the results of the inspection of damaged items by the manufacturer.
7. Credit will be issued if and when the warranty claim is approved and **MUST NOT** be deducted from the account by the dealer.
8. Products and/or parts not manufactured by M.F.E. are subject to their own manufacturer's warranty conditions.

WARRANTY CONSIDERATION IS ONLY VALID WHEN THE WARRANTY REGISTRATION FORM HAS BEEN RECEIVED BY MARKET FARM EQUIPMENT.

WARRANTY REGISTRATION

MARKET FARM EQUIPMENT LIMITED
R.R. 1 DASHWOOD, ONTARIO, CANADA, N0M 1N0
Fax: 519-238-6044 E-mail: mfeltd@execulink.com

Purchaser's warranty protection on this equipment is valid only when this registration form is completed by the purchaser and returned to Market Farm Equipment Limited.

Date of purchase: _____

Type of equipment: _____

Model number: _____ **Serial number:** _____

PURCHASER'S SIGNATURE INDICATES:

- Acceptance of equipment, fully assembled () unassembled ()
- Receipt of operator's manual
- Clear understanding of warranty
- Receipt of instructions on special safety equipment available
- Receipt of instructions on safe and proper operating procedures

PURCHASER:

Name: _____

Signature: _____

Mailing Address: _____

Prov./State: _____ **Postal/Zip Code:** _____

Telephone number: _____

Purchased from: _____

THIS WARRANTY MUST BE VALIDATED BY THE MANUFACTURER

It is valid only when a copy of the registration has been received by the manufacturer at address shown.

MARKET FARM EQUIPMENT LIMITED

EXPRESS WARRANTY

Market Farm Equipment Limited warrants against defects in construction and materials for a period of ONE year. We reserve the right to inspect and decide whether material or construction was faulty, or whether abuse or accident voids our guarantee.

This warranty does not cover a component which fails, malfunctions or is damaged as a result of (I) improper modification or repair, (II) accident, abuse or improper use, including loading beyond the specified maximum weights and requirements (III) improper or insufficient maintenance, or (IV) normal wear and tear.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

In no way shall Market Farm Equipment Limited be liable for special, direct, incidental or consequential damages of any kind, including but not limited to labour charges.

The exclusive remedy under this warranty shall be repair or replacement of the defective component at Market Farm Equipment Limited's option. This is the entire agreement between Market Farm Equipment Limited and the owner about warranty. NO M.F.E. Ltd. employee or dealer is authorized to make additional warranty on behalf of Market Farm Equipment Limited.

(Fill in the following for future reference)

Serial number: _____

Date of purchase: _____

Purchased from: _____

SAFETY INFORMATION


- Before using auger READ and UNDERSTAND SAFETY INSTRUCTIONS.
- After hydraulic lines are connected, run auger empty to ensure the flighting is rotating in the proper direction. (if ran backwards, damage may occur)
- Auger should be empty when moving or transporting.
- Hydraulic oil leaking under pressure can cause injury. Make sure all hydraulic connections are tight. Before disconnecting hydraulic lines, relieve pressure.
- Do not adjust, clean or service auger while it is running.
- Keep all safety shields in place. Replace any safety decals that become lost or damaged.
- Do not operate the auger in a manner that it was not intended for.
- When transporting, always keep auger in its lowest position.

HYDRAULIC SYSTEM OPERATING RESTRICTIONS

MAXIMUM FLOW – 15 G.P.M. MAXIMUM PRESSURE – 1750 P.S.I.


MAXIMUM FLOW AND MAXIMUM PRESSURE conditions MUST NOT occur simultaneously. Damage will occur and warranty will be void. Use only ½" hydraulic hose when plumbing. Smaller hose will create heat that will burn out the hydraulic motor and warranty will be void.

Do not tee into hydraulic lift cylinders on planters or drills.

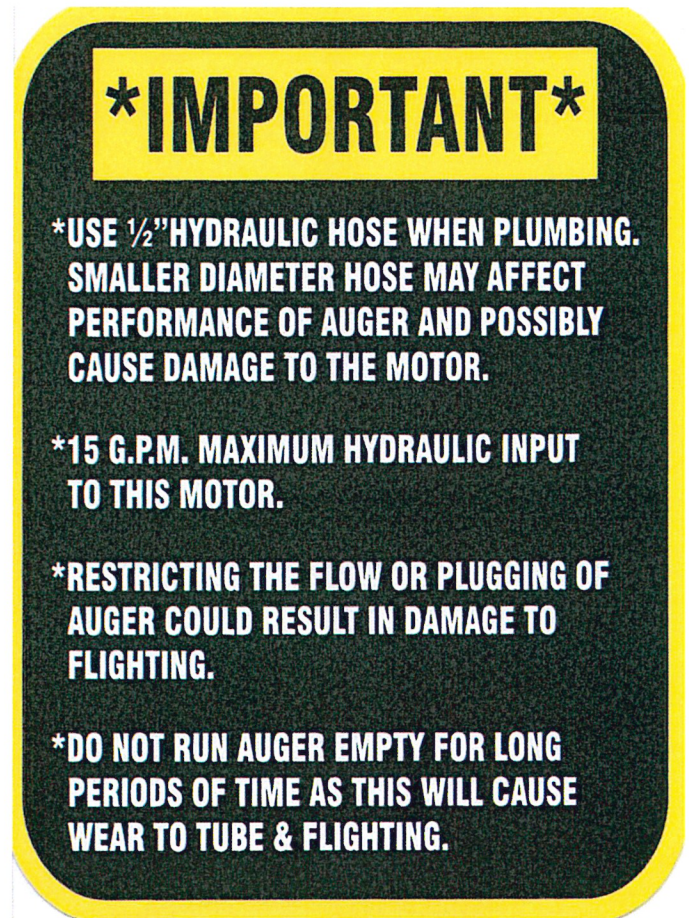

MOUNTING INSTRUCTIONS FOR 18 ' SINGLE AUGER SEED-FILL CIH 1240 PIVOT PLANTER

- 1: Remove lower two 1/2" bolts from tank frame as shown in PIC: 1.**
- 2: Attach main transport frame on the outside of tank frame using the above 2 Bolts. See PIC: 1 (Longer bolts are supplied to be used if necessary). Finger tighten.**

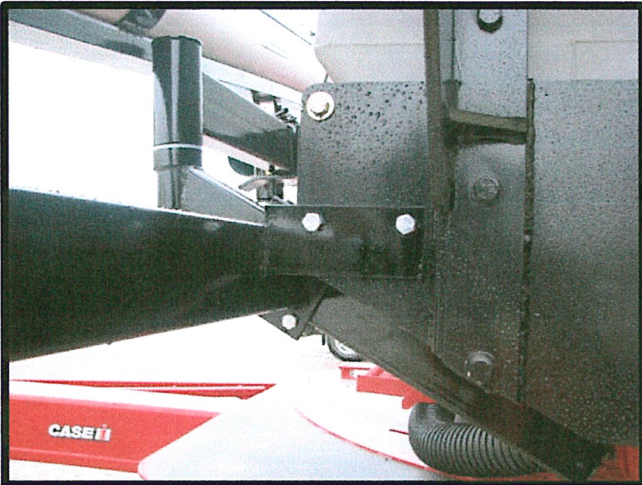


PIC: 1




PIC: 2

- 3: Mount main frame to the angled seed box frame. See PIC: 2.
Butt main frame up to the transport frame already mounted. Finger tighten.**
- 4: Attach swing arm transport bracket to the main frame using the main transport bracket (already mounted in step 1) as the backer plate. See PIC: 3. Tighten securely. Next tighten main frame followed by the 2 bolts removed in step 1.**

HARDWARE MODIFICATIONS FOR CIH 1245 PLANTER

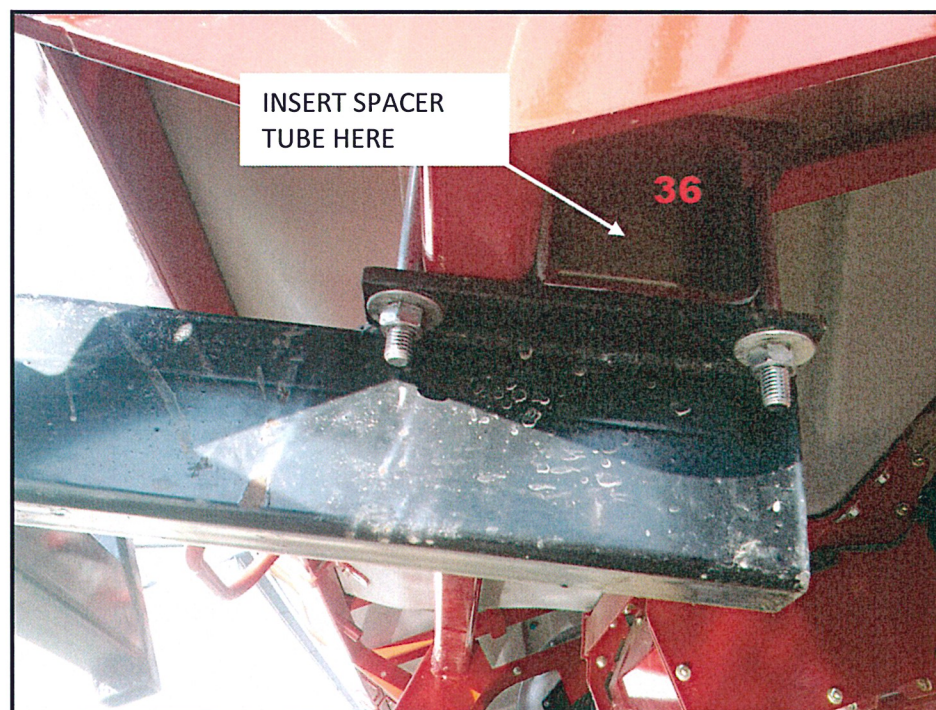

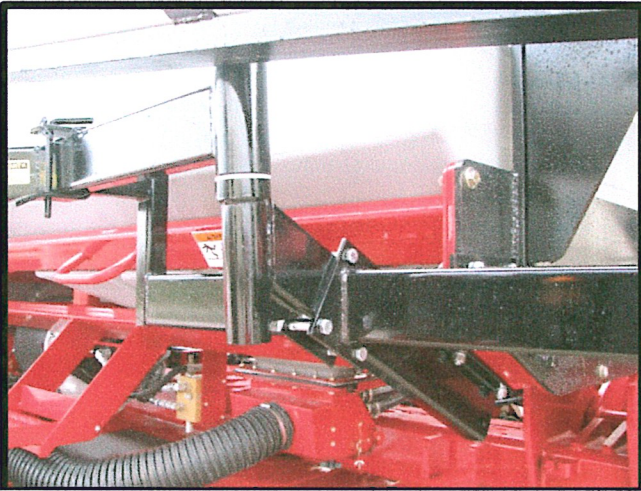

PIC: 3



PIC: 4

5: Slide swing arm onto main frame until it rests on plastic washer. Make sure not to damage the plastic sleeve inside swing arm tube. See PIC: 3

**6: Mount transport sub-frame and wedge lock receiver. See PIC: 4
Tighten securely**

7: Remove cap on bottom of swivel post attached to auger frame. Insert into swing arm then replace cap and tighten. See PIC: 5



PIC: 5



PIC: 6

8: Full frame kit. See PIC: 6

9: Attach hopper making sure not to over tighten. Should be able to rotate for transport and cleanout.

10: Attach telescopic downspout. Secure through handle with chain and snap lock.

OPERATING INSTRUCTIONS:

Loosen lock bolt on transport bracket and remove lock pin on the swing arm. Swing auger into filling position so that the telescopic downspout reaches both seed hoppers.


Before transporting, make sure both the lock bolt is tight and that the lock pin is in place. Rotate hopper inward.

TOP DRIVEN AUGERS

RETURN LINE OUT

**VALVE IN CLOSED
POSTION**

PRESSURE LINE IN


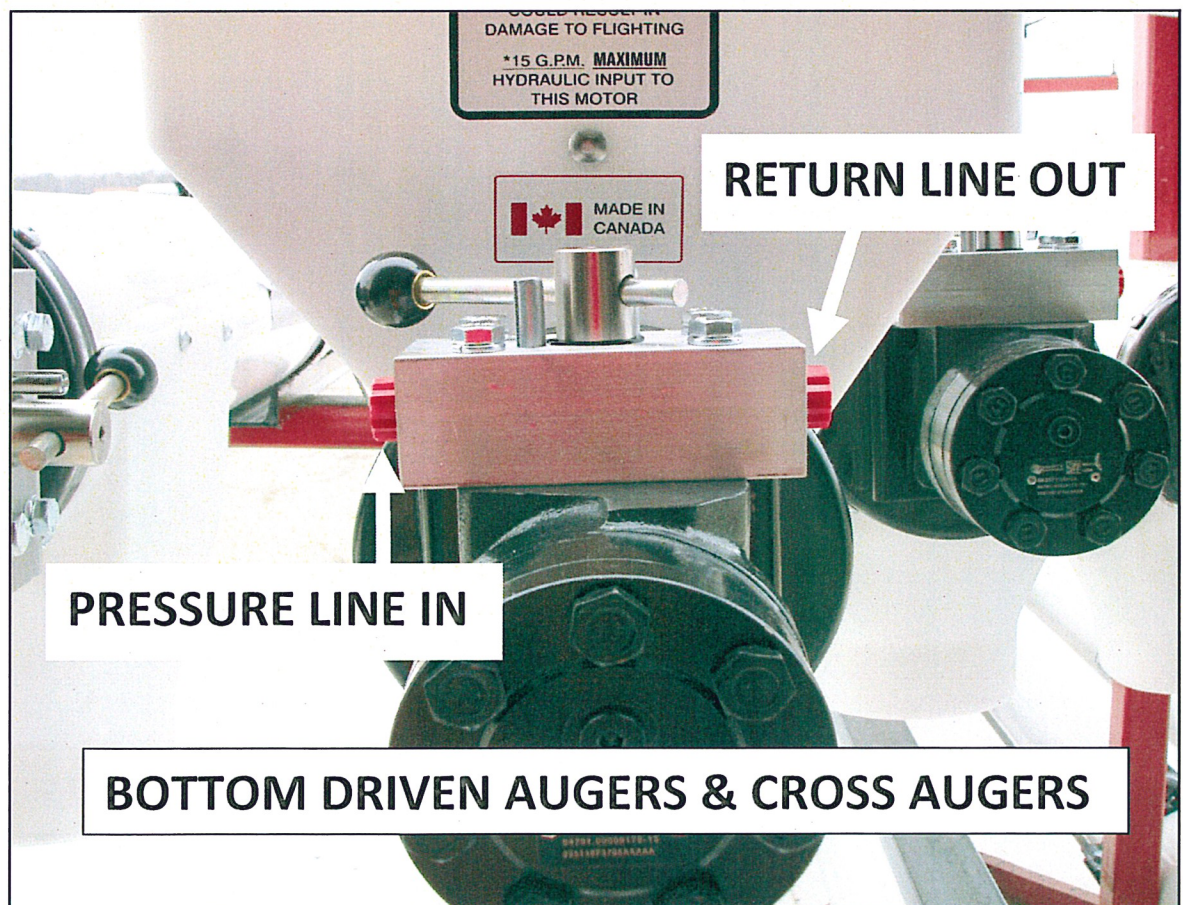


RETURN LINE OUT

PRESSURE LINE IN

BOTTOM DRIVEN AUGERS & CROSS AUGERS

18' SINGLE AUGER SEED-FILL FOR CIH 1240/1245 PIVOT PLANTER

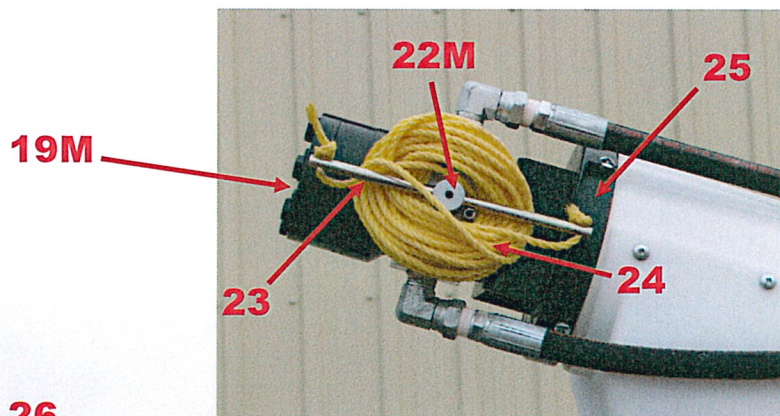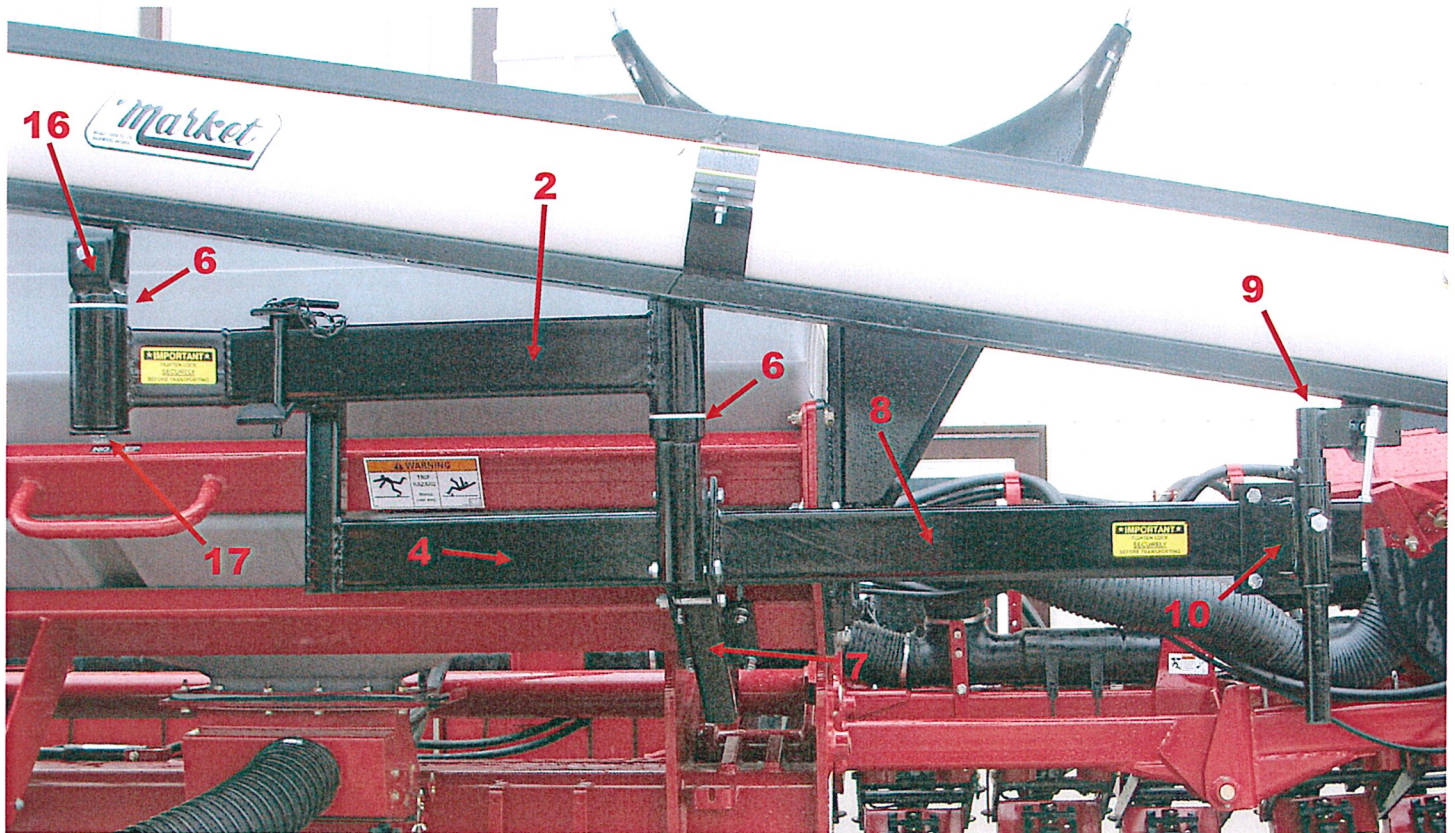

SINGLE AUGER SEED-FILL FOR CIH 1240/1245 PARTS LIST


REF#	PROD. #	DESCRIPTION
1	1485	6" UHMW PLASTIC SLEEVE (NOT SHOWN)
2		SWING ARM (CIH 1240)
3	1293	HEIGHT ADJUSTER TUBE C/W COLLAR
4		SWING ARM CRADLE FRAME
5	1175	LOCK BOLT ASSEMBLY
6	783	UHMW PLASTIC WASHER
7		FRAME WELDMENT C/W BACKER PLATE (CIH 1240)
8		TRANSPORT BRACKET FRAME
9	956	WEDGELOCK RECEIVER
10		TRANSPORT BRACKET C/W BACKER PLATE (CIH 1240)
14		LOWER SUPPORT CHANNEL
15		UPPER SUPPORT CHANNEL
16		SWIVEL POST
17		3" FLAT WASHER
19M	395	6 CU. INCH MOTOR (MANIFOLD MOUNT)
22M	117	VALVE (MANIFOLD MOUNT)
23	580	H-8 VALVE HANDLE
24	102	12' CONTROL ROPE
25	198	6" MOTOR PLATE
26	613	6" PLASTIC AUGER SPOUT C/W SCREWS
27	612	6" 3-STAGE (5'-10') TELESCOPING DOWNSPOUT
27A	725	6" X 18" FLEX HOSE C/W RIVETS & WASHERS HEAVY MATERIAL (BMD) #225
27B	149	6" HOSE CLAMP
30	1177	CHAIN C/W SNAP
32	1203	HOPPER STOP (NOT SHOWN)
33	193	6" PVC TUBE (RAW)
34B	657	6" BRISTLE FLIGHTING specify length
34CP	742	5" CUPPED PLASTIC FLIGHTING specify length
34S	834	6" CUPPED STEEL FLIGHTING specify length
35	546	6" VERTICAL AUGER HOPPER ASSEMBLY
35A	549	6" VERTICAL AUGER HOPPER CLAMP BAND (NOT SHOWN)
35B	548	6" VERTICAL AUGER HOPPER SAFETY GRILLE (NOT SHOWN)
36		4" SQ. TUBE SPACER FOR CIH 1245 PLANTERS
NUTS & BOLTS SOLD SEPERATELY		

****U-BOLTS/BOLTS** specify make & model # of seed drill

OPTIONAL VALVES FOR HYDRAULIC AUGERS


Note: These optional valves do not replace the shut-off valve on the auger.

A directional valve fitting can be installed to restrict the auger from running in the reverse direction. This valve should be installed on the return line, between the valve on motor and the tractor. Thread is $\frac{1}{2}$ " NPT. **RECOMMENDED FOR AUGERS THAT SHOULD NOT BE RUN IN REVERSE, AS IT MAY CAUSE DAMAGE TO THE FLIGHTING.**

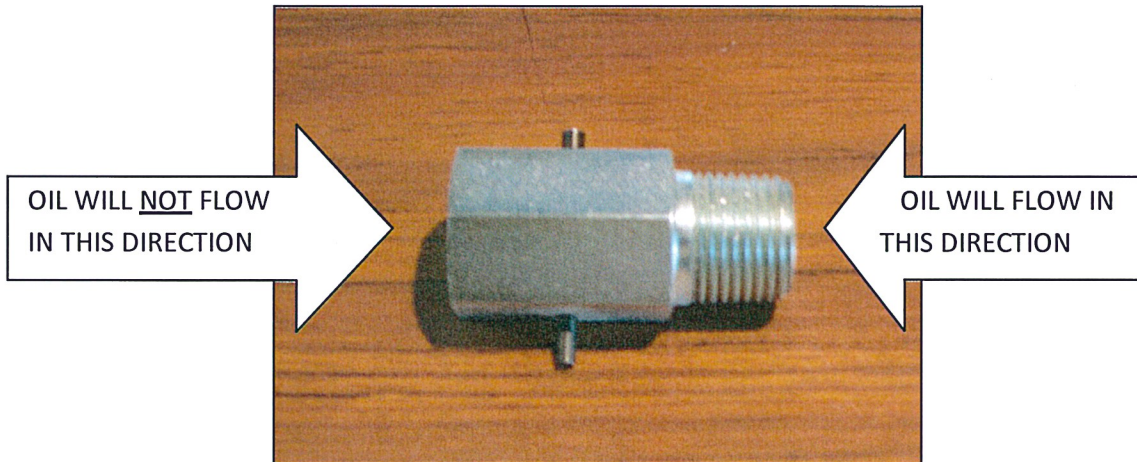

An in-line, pressure compensated, nonadjustable flow regulator valve is available for CLOSED CENTER HYDRAULIC SYSTEMS. In the controlled direction, this regulator will maintain a constant flow rate of 10 GPM. This valve should be installed on the pressure line, between the tractor and the valve on motor. Thread is $\frac{3}{4}$ " NPTF (must be reduced to $\frac{1}{2}$ ")

RECOMMENDED FOR AUGERS OPERATED BY LARGER TRACTORS WITH LARGER HYDRAULIC OUTPUT.

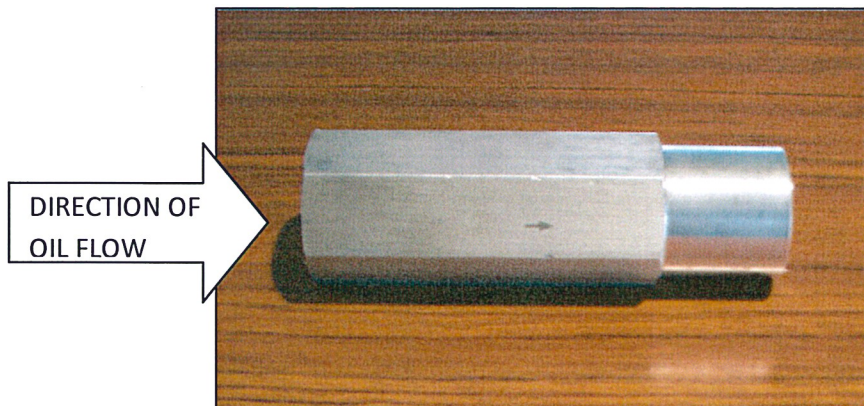

Augers operate best at 10-12 GPM & 1200-1500 PSI.

Market Farm Equipment Ltd. RR# 1 Dashwood, Ontario, Canada N0M 1N0
E-Mail mfeltd@execulink.com Web-Site www.marketfarmequipment.com

IMPORTANT

YOUR AUGERS DOWNSPOUT SHOULD NEVER BE SET DOWN OR LEFT UNATTENDED WHILE THE AUGER IS RUNNING.

MATERIAL CAN BUILD UP QUICKLY CAUSING THE DOWNSPOUT AND AUGER TO PLUG. THIS CAN DAMAGE THE AUGERS FLIGHTING AND MOTOR.

ALWAYS TURN AUGER OFF BEFORE LEAVING THE DOWNSPOUT TO ATTEND TO OTHER MATTERS.

